


SIDE TO SIDE PORCH ROCKER ASSEMBLY INSTRUCTIONS



Thank you for purchasing a quality select hardwood rocking chair. If you should have any comments or questions please call the toll-free number below between 8:00 AM and 5:00 PM CST Monday through Friday. Again, we appreciate your business and hope you get many years of enjoyment from this chair.

NOTICE: The Rocking Chair product that you have purchased requires some assembly. As with all furniture, proper assembly is necessary for the safe and comfortable use of your rocker. Hinkle Chair cannot be responsible for any damage or injury that results from improper assembly of the chair. Please read and follow these instructions carefully and in sequence. If you have any questions please call The Hinkle Chair Company helpline (800) 251-3025 or contact us on our website at www.hinklechair.com.

ROCKING CHAIR ASSEMBLY INSTRUCTIONS

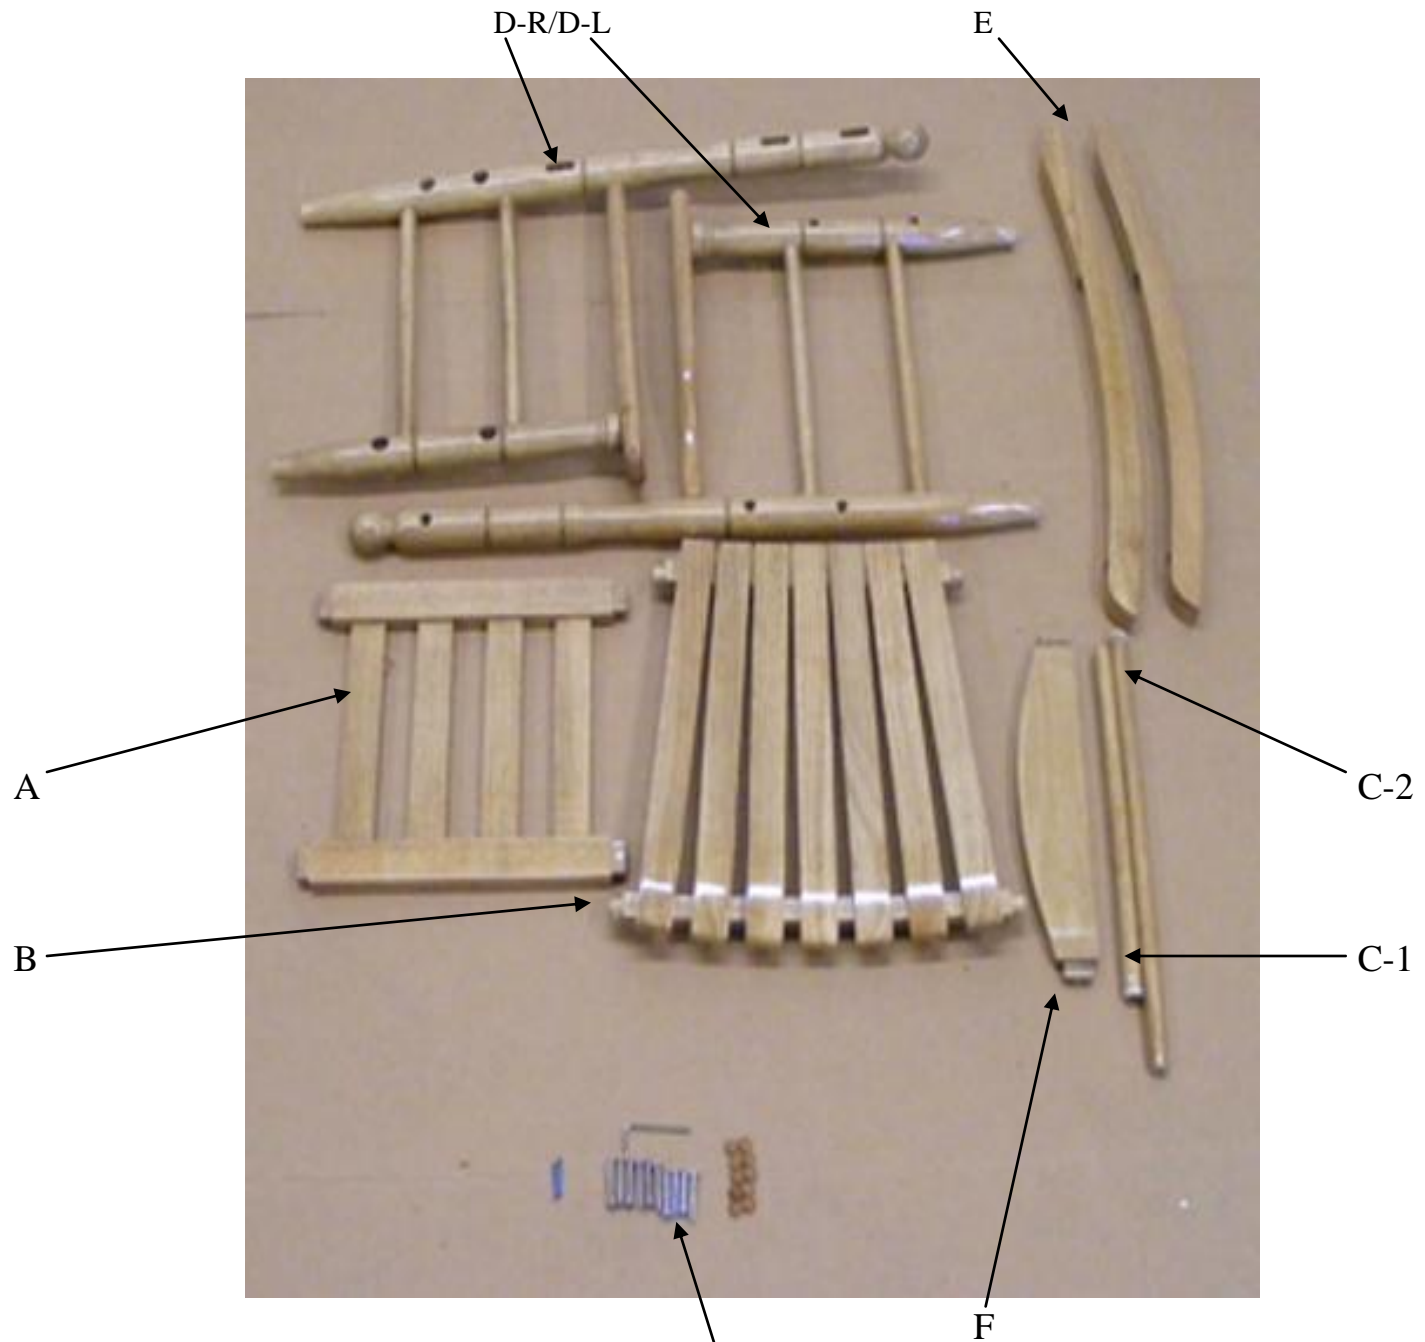

PARTS INCLUDED:

- 1 – Chair Back (A)
- 1 – Chair Seat (B)
- 1– Back Spindle (C-1)
- 1– Front Spindles (C-2)
- 2 – Rocker Sides (D-L/D-R)
- 2 – Runners (E)
- 1- Headrest (F)

- 10 – Wooden Buttons
- 10– Hex Head Screws
- 1 – Hex Wrench
- 4 – Runner Nails

TOOLS REQUIRED FOR ASSEMBLY: (NOT INCLUDED)

- Standard Hammer (using folded towel/heavy cloth to protect the finish)
- Phillips Screwdriver Note: Spindle styles vary but assembly is the same.

**** Attention/Stop****



Hinkle Chair Company has made every effort to provide you with a ready-to-assemble product that has the same quality as our fully assembled rocking chairs. In the unlikely event that there are incorrect, missing parts, or the parts become damaged during shipping, following the instructions below will protect you(The Customer) from accepting responsibility for a product that is damaged or incomplete.

- 1st) Inspect all parts for any imperfection that might have occurred during shipping.
- 2nd) If there are missing or damaged parts the chair must be returned in the original packaging before any credit can be issued. In the case of damaged parts, individual parts will be sent as replacements.
- 3rd) Lay all the parts out as shown on page 2. This will help you identify and familiarize yourself with the individual parts and will make assembly much easier.
- 4th) When you have determined that all parts are present and you are familiar with all of the assembly steps begin to assemble the rocker

This product is intended for a covered porch or indoors. This product should be cleaned weekly as you would with any other wooden furniture product.

If at any time during assembly you need assistance please contact the Hinkle Chair Company helpline at (800) 251-3025 M-F 8 AM to 5PM CST.

STEP 1:

Place right side of rocker D-R on cardboard shipping box with mortised holes facing up. Insert the Headrest (F) into the mortise at the top of the back post. Tap in with hammer until fully inserted. Ensure the bevel faces the rear of the rocker Fig. 1

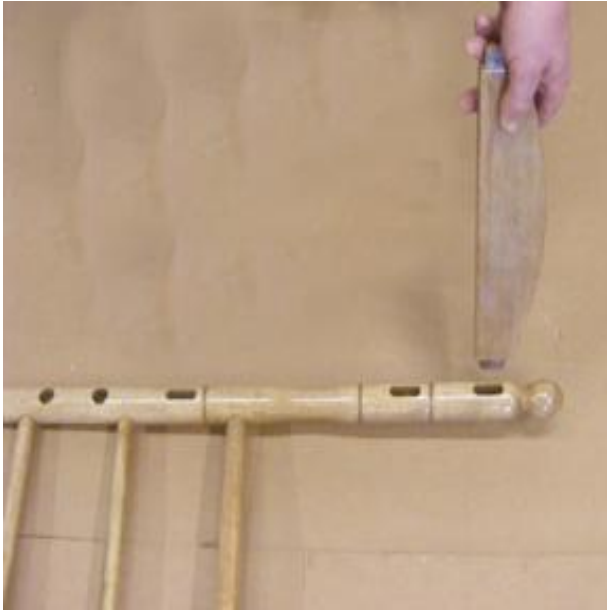


Fig. 1

Insert the Back (A) into the mortised hole in the back post below the Headrest (F). Note: The Back also has bevels that need to face to the rear. Fig. 2



Fig. 2

STEP 1:

Place Seat (B) into the pre-drilled holes in Side D-R. Align the front and back tenon and tap in with a hammer. Fig. 3



Fig. 3

Place Rear Spindle (C-1 the short one) into the pre-drilled hole at the bottom of the back post on Side (D-R). Tap in with a hammer until fully seated. Fig. 4

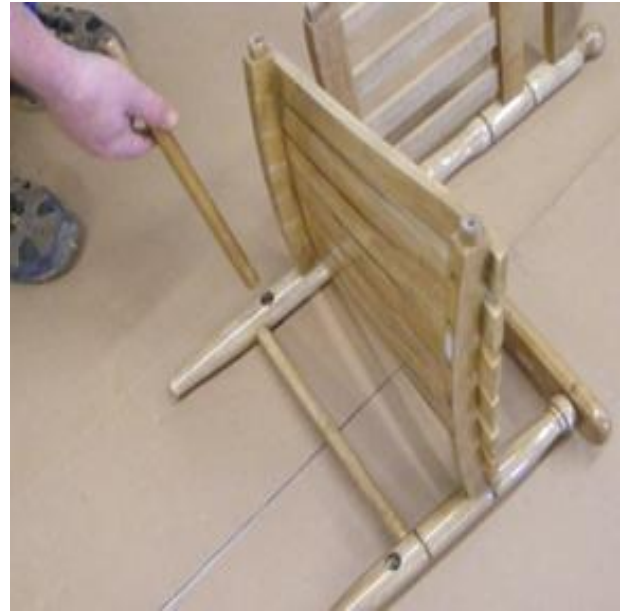


Fig. 4

STEP 1:

Place Front Spindle (C-2 long one) into pre-drilled hole on the front post of Chair Side D-R. Tap in with hammer until fully seated. Fig. 5



Fig. 5

Place Side (D-L) over the tenons facing up and align with the pre-drilled holes and mortises on Side (D-L). Tap down until fully inserted. Fig. 6



Fig. 6

STEP 2:

Place Hex Head screw in pre-drilled hole through the back post and into the headrest using the wrench provided. Do not fully tighten. . Fig. 7



Fig. 7

Move down to the next pre-drilled hole and repeat the previous step. Fig. 8



Fig 8

STEP 2:

Continue placing Hex Head Screws in pre-drilled hole in the front post. Again do not fully tighten. Repeat for the lower pre-drilled hole on the front post. Fig 9



Fig. 9

STEP 3:

Rotate the rocker onto the other side. Begin repeating the previous steps of inserting and tightening all available pre-drilled holes on this Side (D-R). Once you have all of the side Hex Head Screws in go back and fully tighten all ten Hex Head Screws. Fig. 10



Fig. 10

STEP 4:

Place the Runner (E) over the tenons at the boom of the posts.
Ensure that the pre-drilled hole in the Runner (E) faces in.
Align the tenons and pre-drilled holes and tap on with a hammer.
Fig. 11



Fig. 11

STEP 4:

Repeat for the other Runner. Fig. 12



Fig. 12

STEP 4:

With the nails provided, place one nail per runner into the predrilled hole in side of runner. Repeat for all four posts on both sides.

Fig. 13



Fig. 13

STEP 5:

Place the buttons provided into the pre-drilled holes on each side. Tap in with a hammer to cover the Hex Head Screws. Assembly is complete.

Fig. 14



Fig. 14

CARE TIPS

LISTED BELOW ARE SOME TIPS TO HELP KEEP YOUR FURNITURE LOOKING NEW.

To preserve the finish on stained or pure white furniture it is highly recommended that they either be placed indoors or in a protected environment such as a covered porch. In any case the finish will last longer and look better if kept out of direct sunlight and blowing rain. This furniture is not intended to be used in an unprotected environment. The sun and rain will weather the varnish finish if left out in the elements over time (6 months to one year depending on the climate). Our furniture products need the same attention as any other solid wood furniture and monthly cleaning with any quality household furniture polish will keep your furniture looking new for many years to come. If your climate has high humidity, even if you follow the recommended cleaning intervals above, you may have problems with mold or mildew. A commercial furniture cleaner is recommended.