

#204 PORCH SWING ASSEMBLY INSTRUCTIONS



Thank you for purchasing a quality porch swing. The product you have purchased requires some assembly. This item has been carefully inspected before packing to ensure its adherence to our strict Quality Control Standards. Proper assembly will ensure not only your safety, but many years of enjoyable use of this quality product. We STRONGLY suggest that you familiarize yourself with these instructions prior to assembling this product. It's up to you to follow carefully EACH STEP of the assembly process. For your safety, DO NOT SKIP any step indicated in these instructions. Use all the hardware provided as indicated. Be sure to tighten all fasteners securely. The manufacturer will not be responsible for any damage or injury that results from improper assembly of the swing. If you have any questions regarding the assembly of this swing, feel free to contact us using the customer service (800) 251-3025.

****Attention/Stop****



Please read before assembling this product!

Every effort has been made to provide you with a ready-to-assemble product that has the same quality as our fully assembled furniture. In the unlikely event that there are incorrect or missing parts or that parts become damaged during shipping, following the instructions below will protect you (The Customer) from accepting responsibility for a product that is damaged or incomplete.

1st) Inspect all parts for any imperfection that might have occurred during shipping.


2nd) If there is damaged or missing parts the chair must be returned in the original packaging before any credit can be issued. In the case of damaged parts, individual parts will be sent as replacements.

3rd) When you have determined that all parts are available and undamaged, and that all parts and assemblies fit properly, proceed with all steps

This product is intended for a covered porch or indoors. This product should be cleaned weekly as you would with any other wooden furniture product.


If at any time during these steps, assistance is needed, please contact Customer Service (800) 251-3025

SWING ASSEMBLY INSTRUCTIONS

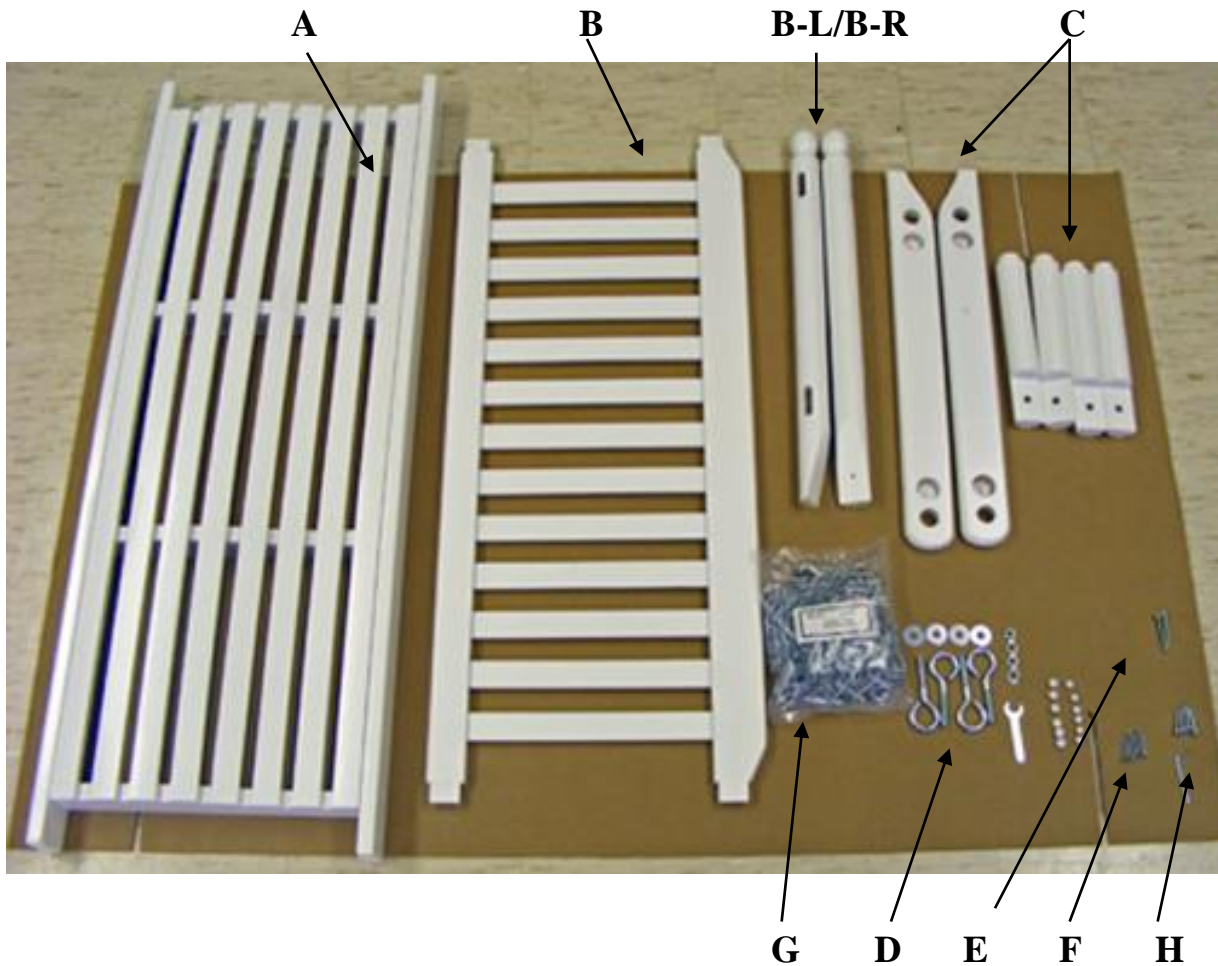

Parts Included:

- 1 - Swing Seat (A)
 - 1 - Swing Back (B)
 - 2- Swing Back Posts (B-L/B-R)
 - 2 - Swing Arms and Posts (C)
 - 4 - Eye Bolts Washers and Nuts (D)
 - 12- Buttons 6-Large 4-Small
 - 2 - Arm Bolts and Wrench(E)
 - 6 - Back Screws and Arm Screws (F)
 - 1 - Chain Assembly (G)
 - 4- Back Bolts w/Wrench(H)
- Tools Required For Assembly**
(not included)Screwdriver

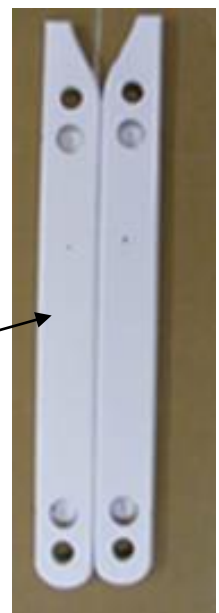


*** ARMS MARKED LEFT AND RIGHT**

STEP 1:




Line up the top of the post with the tenons on the swing back. Press down firmly. Tap with hammer to fully seat.

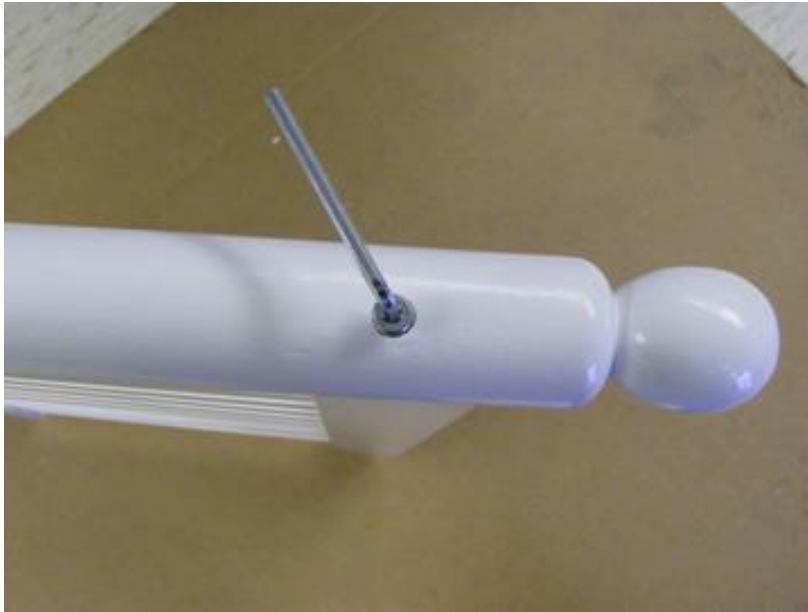

Place screw in top pre-drilled hole. Tighten with the wrench provided.

STEP 1:

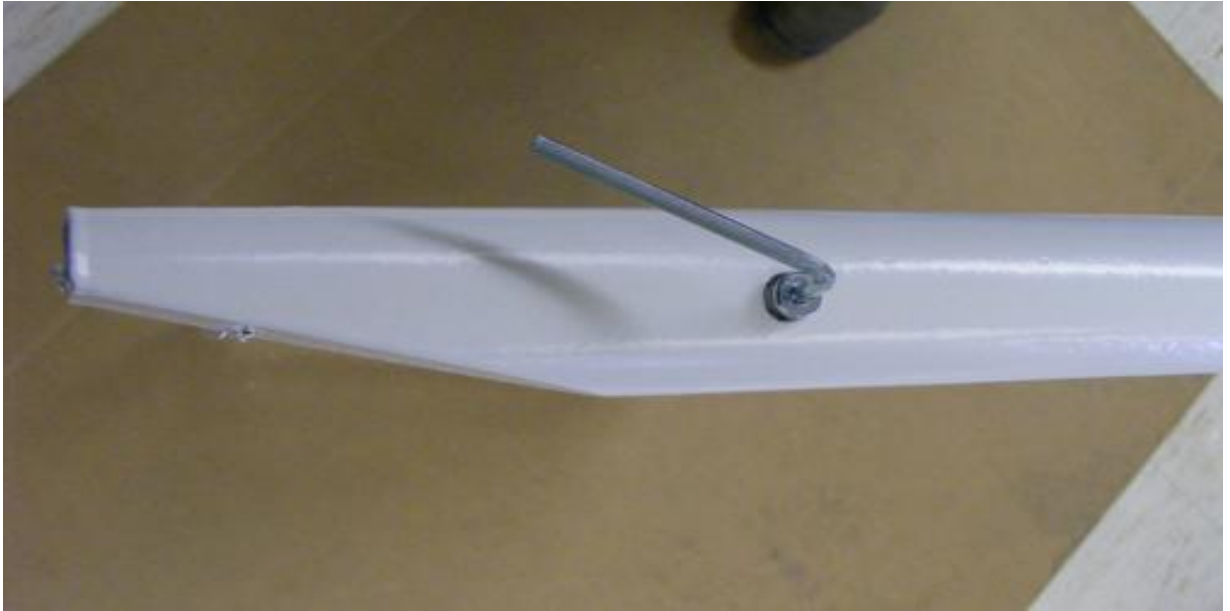

Repeat for bottom pre-drilled hole. Flip the back over and repeat for other side. Install buttons at the end of assembly.

STEP2:

Lay Swing on the shipping box during assembly to protect it from scratching. Attach swing posts (C) to swing seat (A) using eyebolts nuts and washers(D). Complete this for both left and right sides. Place arm on top of posts as in the picture below.



STEP 2:

Attach the swing arm to swing posts (C) using screws (F) provided. Place small button in hole in arm to cover the screw. Complete this for both left and right sides.



STEP 3:

Attach swing back (B) to swing arms (C) using arm bolts (E). Complete this for both sides.



STEP 4:

Attach swing back (B) to swing seat (A) using back screws (F). Complete this for both sides. Push buttons in the holes to cover the head of the screw.



STEP 5:

Run swing chain (G) through the holes in the swing arm (C) and connect to the eye bolt (D) below. Complete this on all four corners of the swing.



Your swing is now ready to hang on the hooks provided.

STEP 6:

To attach swing hooks (included in Chain Assembly pack) (G) to anchor point where swing is to be suspended; first you must drill a 3/16" pilot hole. This will make installation of the hooks much easier and will also help you determine if the material is solid and able to handle the weight of the swing.




STEP 6:

Place hook into pilot hole in the anchor point. Begin turning clockwise and hook will thread in. Notice the correct way (left) to thread in the hook. Using pliers or long screwdrivers as depicted (right) is wrong. This can bend the lower hook, damage the nylon washer, and weaken or break the hook at the base of the threads.



CORRECT

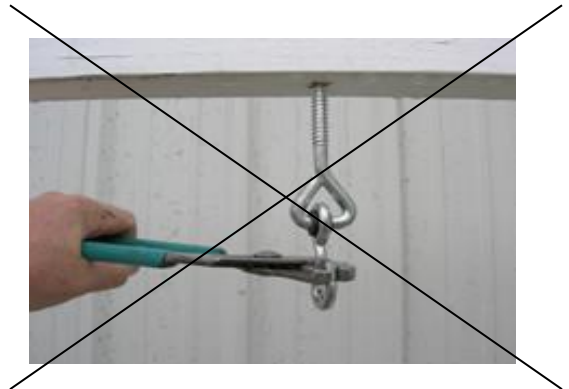

WRONG!

NOTE: PLACE HOOKS IN MATERIAL CAPABLE OF HANDLING THE LOAD YOU WILL BE PLACING ON THE SWING.

CARE TIPS

LISTED BELOW ARE SOME TIPS TO HELP KEEP YOUR FURNITURE LOOKING NEW.

To preserve the finish on stained or pure white furniture it is highly recommended that they either be placed indoors or in a protected environment such as a covered porch. In any case the finish will last longer and look better if kept out of direct sunlight and blowing rain. The finish on this furniture will last for a lifetime if used indoors. This furniture is not intended to be used in an unprotected environment. The sun and rain will weather the varnish finish if left out in the elements over time (6 months to one year depending on the climate). Our furniture products need the same attention as any other solid wood furniture and monthly cleaning with any quality household furniture polish will keep your furniture looking new for many years to come. If your climate has high humidity, even if you follow the recommended cleaning intervals above, you may have problems with mold or mildew. To remove the mold and mildew dilute one ounce of bleach into sixteen ounces of water and apply with a soft cloth. More than one application may be necessary. Allow to dry and apply furniture polish to protect the finish.